

FIX-CERA

Polishing wax for clay, terra cotta, natural stoneware and natural stone.

Preparing the substrate:

- ◆ This product's success begins with properly preparing the substrate: if the substrate is dirty or has efflorescence, the final look and condition of the repair will not meet your expectations.
- ◆ The clay, natural stoneware or natural stone must be clean and free of dust, wax, grease, efflorescence...
- ◆ To do this, we can recommend different cleaning systems, depending on the kind of surface to be treated.
- ◆ Ambient temperature must be between +5°C and +35°C.

What can be expected of FIX-CERA?

- ◆ **FIX-CERA** is a beautifying treatment.
- ◆ **FIX-CERA** leaves a semi-satin surface.
- ◆ Since **FIX-CERA** is a blocking primer, it offers good resistance to oil and water, but the specific hydro-repellant treatment is with **FIX-OIL**.

Preparing the product:

- ◆ **FIX-CERA** is a ready-to-use product. It is **NOT** necessary to add anything to it.
- ◆ Open the container and apply the liquid with a varnish roller.



Use a varnish roller to apply **FIX-CERA**.



ATTENTION

FIX-CERA should not be used:

- ◆ In temperatures below +12°C.
- ◆ Outside.
- ◆ For natural, glazed or polished porcelain tiles.
- ◆ Adulterating the formula.



With **FIX-CERA**, floors can be beautified.

COVERAGE:

Of acid wash with GRESNET :	25 l/100m ²
Of soapy wash with FIX-SABO :	10 l/100m ²
Of FIX-CERA :	0.05-0.06 l/m ² (depending on absorption of substrate to be treated)

CLAY IN INTERIORS:

1

We recommend laying the clay tile with **TECNOCOL FLEX** or **FIXMARMOL**.


 allow to dry for
at least 7 days

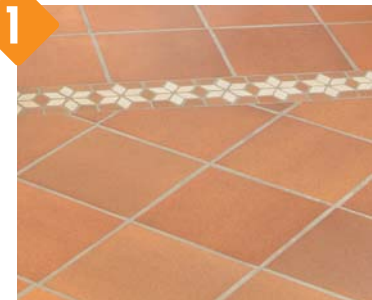
2

If efflorescence appears, wash with 1 part of **GRESNET** and 5 parts of water. Rinse with water.


 allow to dry for
at least 7 days

3

Apply a coat of **FIX-CERA** using a varnish roller (coverage 5-6 l/100m²)

UNGLAZED NATURAL STONEWARE IN INTERIORS:

1

We recommend laying the natural stoneware tile with **FIXAGRES FLEX** or **FIXCONTACT FLEX**.


 allow to dry for
at least 7 days

2

Clean the leftover mortar with 1 part of water and 10 parts of **GRESNET** and then rinse.


 allow to dry for
at least 2 days

3

Apply a coat of **FIX-CERA** using a varnish roller (coverage 5-6 l/100m²)

NATURAL STONE IN INTERIORS:

1

We recommend laying with 15 mm of **FIXA-CER 15 mm** or a thick layer **FIXAGRES FLEX** or with **FIXMARMOL**.


 allow to dry for
at least 7 days

2

Wash with **FIX-SABO** diluted in water. Rinse with clean water.


 allow to dry for
at least 2 days

3

Apply a coat of **FIX-CERA** using a varnish roller or brush (coverage 5-6 l/100m²)