

FIXAQUA FILM

Liquid polyurethane membrane for super-elastic waterproofing in situ and without overlaps, for swimming-pools, flat roofs etc. Ideal for unstable structures.

Preparing the substrate:

- ◆ Substrates must be free of dust, mould, paints, waxes etc.
- ◆ When waterproofing water tanks or swimming-pools, **ALWAYS** first apply a pass of **FIXAQUA PRIMER** before applying **FIXAQUA FILM**.
- ◆ On the swimming-pools dilation joints, first stick the **FIX-BANDA** self-adhesive strip on either side of the joint.

Preparing the mixture:

- ◆ **FIXAQUA FILM** is a bi-component. The small bottle must be mixed with the large pot of paint.
- ◆ Slowly with an electric mixer for 2-3 minutes.
- ◆ If you wish to apply the product with an airless sprayer, a maximum of 5% **FIXAQUA DISOLVENTE** must be added to the mixture.

Applying the mix:

- ◆ If you apply it with an airless sprayer, spread 2 or 3 uniform passes, allowing 6 hours between the passes.
- ◆ If applying by hand:
 - on **walls**: apply 2 or 3 passes using a woollen roller.
 - en **floors**: apply 1 pass with a 3 mm notched trowel.



On floors: use a 3 mm trowel.



WARNING

Do not use **FIXAQUA FILM**:

- ◆ In saunas or steam-baths (use **HIDROFIX**).
- ◆ In car-parks or where there is movement of trolleys, cars etc.
- ◆ In tanks with strong acids and alkalis.
- ◆ In swimming-pools without first applying **FIXAQUA PRIMER**.




Waterproofing on unstable ground.

CONSUMPTION:

FIXAQUA PRIMER	300 g./m ² applied with long-bristle roller
FIXAQUA FILM	1.5 kg/m ² to obtain an average thickness of 1.5 mm.

INSTRUCTIONS FOR USE:

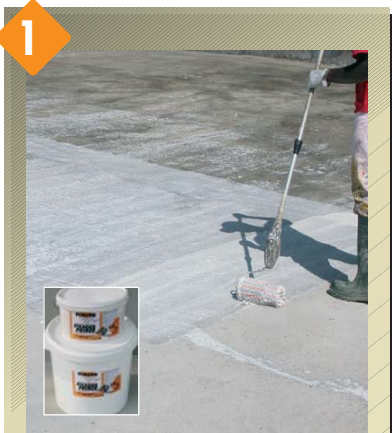

- First apply a pass of **FIXAQUA PRIMER**. Mix the two components and apply with a woollen roller. Allow to dry for 24 hours.



- **FIXAQUA FILM**: mix the polyurethane with the accelerator and agitate for 3 minutes. You now have 30 minutes to use it.



- **Pouring**: this is done next, parallel to the last waterproofed area.



- **Spreading**: make a continuous inside-outside movement. Use a 3 mm trowel.



- **De-airing**: while it is fresh, pass a spiked roller over it to avoid bubbles forming. Allow to dry for at least 6 hours.



- Finally, lay the new tiles exclusively with **TECNOCOL FLEX**. The double application technique must be used.

